





GENERADOR SOLDADOR DUCATI 3,5 KW 190 DUAL 120V-60Hz 240V/60Hz REF. DGW3500ES

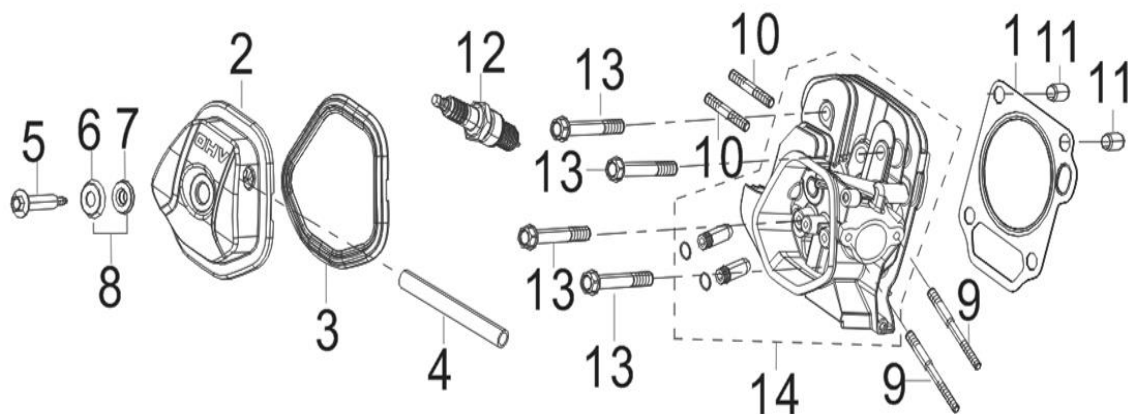


PAG	POS	REFERENCIA	DESCRIPCION
P1	1	DGW3500ES/P1/1	JUNTA CULATA GENERADOR SOLDADOR DUCATI
P1	2	D35M390/P1/6	TAPA VALVULAS MOTOR 390 CC GEN,SOLDADOR DUCATI
P1	3	D35M390/P1/7	JUNTA TAPA VALVULAS MOTOR DUCATI 390CC
P1	4	DGW3500ES/P1/4	TUBO RESPIRADERO GENERADOR SOLDADOR DUCATI
P1	5	D35M390/P1/9	TORNILLO TAPA VALVULAS MOTOR DUCATI 390CC
P1	8	DGW3500ES/P1/8	ARANDELA JUNTA TORNILLO GENERADOR SOLDADOR DUCATI
P1	9	DGW3500ES/P1/9	ESPARRAGO CARBURADOR GENERADOR SOLDADOR DUCATI
P1	10	D35M210/P1/10	ESPARRAGO SILENCIOSO MOTOR DUCATI 210CC DCW/DHL
P1	11	D35M390/P1/14	CASQUILLO CULATA MOTOR DUCATI 390CC
P1	12	CTR7F	BUJIA MOTOR OHV - CORTACESPED
P1	13	D35M390/P1/15	TORNILLO CULATA MOTOR DUCATI 390CC
P1	14	D35M390/P1/17	CULATA COMPLETA MOTOR DUCATI 390CC



GENERADOR SOLDADOR DUCATI 3,5 KW 190 DUAL 120V-60Hz 240V/60Hz REF. DGW3500ES

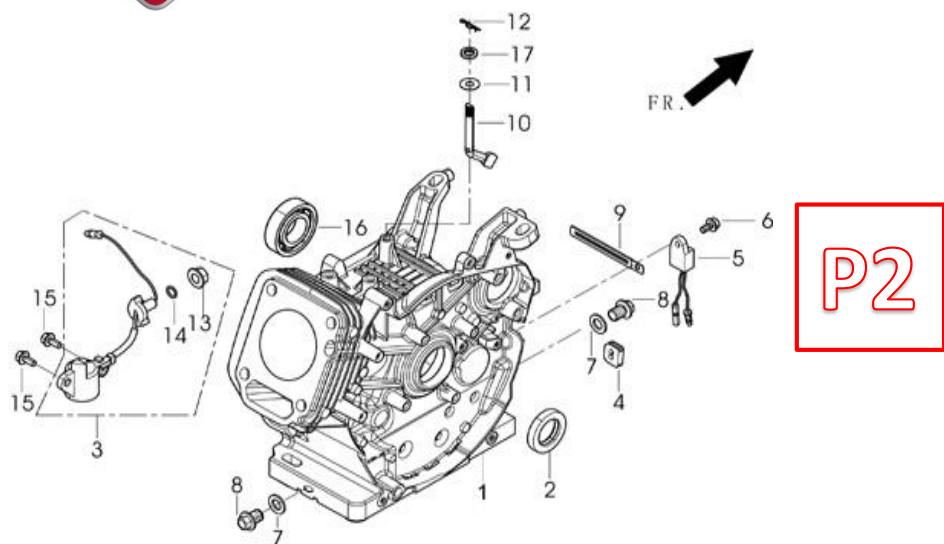


PAG	POS	REFERENCIA	DESCRIPCION
P2	1	DGW3500ES/P2/1	CILINDRO GENERADOR SOLDADOR DUCATI
P2	2	D35M390/P3/10	RETEN CARTER MOTOR 390 CC GEN,SOLDADOR DUCATI
P2	3	D35M390/P2/3	ALARMA NIVEL ACEITE MOTOR DUCATI 390CC
P2	4	D35M390/P2/4	GOMA PASACABLE MOTOR DUCATI 390CC
P2	5	D35M210/P8/4	DIODO MOTOR DUCATI 210CC DCW/DHL
P2	6	D35M100/P11/4	TORNILLO SUJECCION MOTOR DUCATI DCW25/40
P2	7	D35M390/P2/7	ARANDELA VACIADO CARTER MOTOR DUCATI 390CC
P2	8	D35M390/P2/8	TORNILLO VACIADO CARTER MOTOR DUCATI 390CC
P2	9	D35M390/P2/9	SUJETA CABLES MOTOR 390 CC GEN,SOLDADOR DUCATI
P2	10	D35M390/P2/10	EJE BRAZO REGULADOR MOTOR DUCATI 390CC
P2	11	D35M390/P2/11	ARANDELA MOTOR 390 CC GEN,SOLDADOR DUCATI
P2	12	D35M210/P2/17	PASADOR MOTOR DUCATI 210CC DCW/DHL
P2	13	D35M210/P2/15	TUERCA ALARMA MOTOR DUCATI 210CC DCW/DHL
P2	15	D35M210/P8/9	TORNILLO MOTOR DUCATI 210CC DCW/DHL
P2	16	D35M390/P2/15	RODAMIENTO MOTOR 390 CC GEN,SOLDADOR DUCATI
P2	17	D35M390/P2/16	RETEN MOTOR 390 CC GEN,SOLDADOR DUCATI

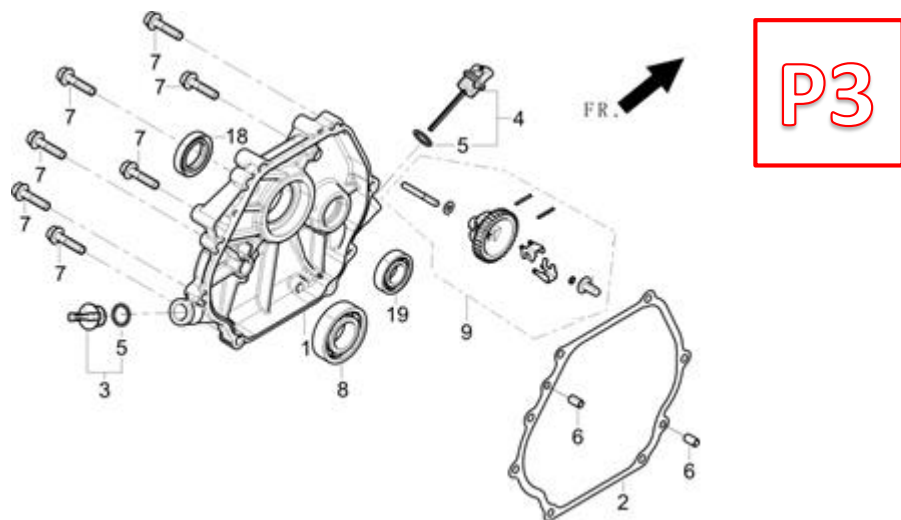

PAG	POS	REFERENCIA	DESCRIPCION
P3	1	DGW3500ES/P3/1	TAPA CARTER GENERADOR SOLDADOR DUCATI
P3	2	DGW3500ES/P3/2	JUNTA CARTER GENERADOR SOLDADOR DUCATI
P3	3	DGW3500ES/P3/3	JUNTA TAPON VARILLA NIVEL GENERADOR SOLDADOR DUCATI
P3	4	DGW3500ES/P3/4	TAPON VARILLA NIVEL GENERADOR SOLDADOR DUCATI
P3	6	D35M210/P3/5	CASQUILLO TAPA CARTER MOTOR DUCATI 210CC DCW/DHL
P3	7	D35M390/P3/6	TORNILLO MOTOR 390 CC GEN,SOLDADOR DUCATI
P3	8	D35M390/P3/7	RODAMIENTO CIGÜEÑAL MOTOR DUCATI 390CC
P3	9	D35M390/P3/9	PIÑON REGULADOR MOTOR DUCATI 390CC
P3	18	D35M390/P3/10	RETEN CARTER MOTOR 390 CC GEN,SOLDADOR DUCATI
P3	19	D35M390/P2/15	RODAMIENTO MOTOR 390 CC GEN,SOLDADOR DUCATI




GENERADOR SOLDADOR DUCATI 3,5 KW 190 DUAL 120V-60Hz 240V/60Hz REF. DGW3500ES

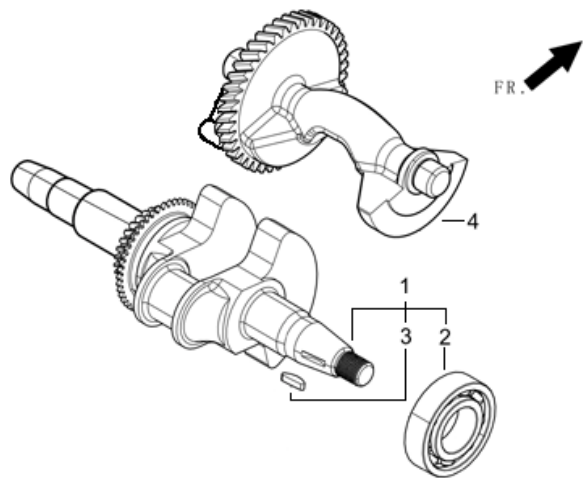

P4

PAG	POS	REFERENCIA	DESCRIPCION
P4	1	DGW3500ES/P4/1	CIGÜEÑAL GENERADOR SOLDADOR DUCATI
P4	4	DGW3500ES/P4/4	CONTRAPESO GENERADOR SOLDADOR DUCATI

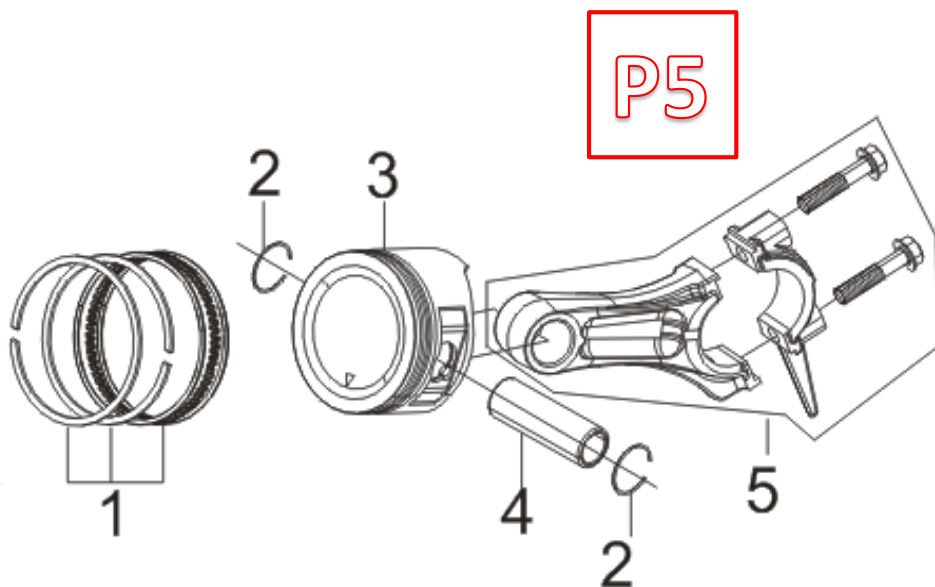


P5

PAG	POS	REFERENCIA	DESCRIPCION
P5	1	DGW3500ES/P5/1	JUEGO SEGMENTOS GENERADOR SOLDADOR DUCATI
P5	2	D35M390/P5/4	CLIP PISTON MOTOR 390 CC GEN,SOLDADOR DUCATI
P5	3	DGW3500ES/P5/3	PISTON GENERADOR SOLDADOR DUCATI
P5	4	D35M390/P5/3	BULON MOTOR DUCATI 390CC
P5	5	DGW3500ES/P5/5	BIELA GENERADOR SOLDADOR DUCATI



GENERADOR SOLDADOR DUCATI 3,5 KW 190 DUAL 120V-60Hz 240V/60Hz REF. DGW3500ES

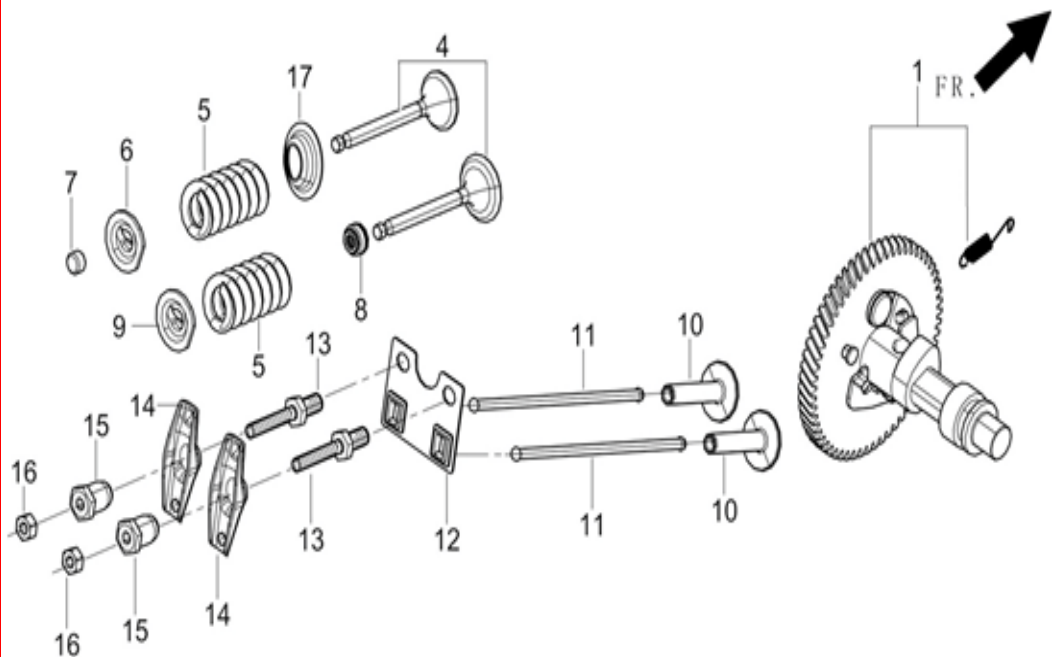

P6


PAG	POS	REFERENCIA	DESCRIPCION
P6	1	DGW3500ES/P6/1	ARBOL DE LEVAS GENERADOR SOLDADOR DUCATI
P6	4	DGW3500ES/P6/4	JUEGO VALVULAS GENERADOR SOLDADOR DUCATI
P6	5	D35M390/P6/5	MUELLE VALVULA MOTOR DUCATI 390CC
P6	6	D35M390/P6/6	PLATILLO VALVULA ADMISION MOTOR DUCATI 390CC
P6	7	D35M390/P6/7	CASQUILLO VALVULA MOTOR DUCATI 390CC
P6	8	D35M390/P6/8	RETEN VALVULA ESCAPE MOTOR DUCATI 390CC
P6	9	D35M390/P6/9	PLATILLO VALVULA ESCAPE MOTOR DUCATI 390CC
P6	10	D35M390/P6/10	TAQUE MOTOR 390 CC GEN,SOLDADOR DUCATI
P6	11	D35M390/P6/11	VARILLA EMPUJADORA MOTOR DUCATI 390CC
P6	12	D35M390/P6/12	CHAPA GUIA VALVULA MOTOR DUCATI 390CC
P6	13	D35M210/P6/10	ESPARRAGO AJUSTE BALANCINES MOTOR DUCATI 210CC DCW/DHL
P6	14	D35M390/P6/14	BALANCIN MOTOR 390 CC GEN,SOLDADOR DUCATI
P6	15	D35M210/P6/12	TUERCA AJUSTE BALANCIN MOTOR DUCATI 210CC DCW/DHL
P6	16	D35M210/P6/13	CONTRATUERCA AJUSTE MOTOR DUCATI 210CC DCW/DHL
P6	17	D35M390/P6/17	ASIENTO MUELLE MOTOR DUCATI 390CC

VERSION 1.0




GENERADOR SOLDADOR DUCATI 3,5 KW 190 DUAL 120V-60Hz 240V/60Hz REF. DGW3500ES

P7

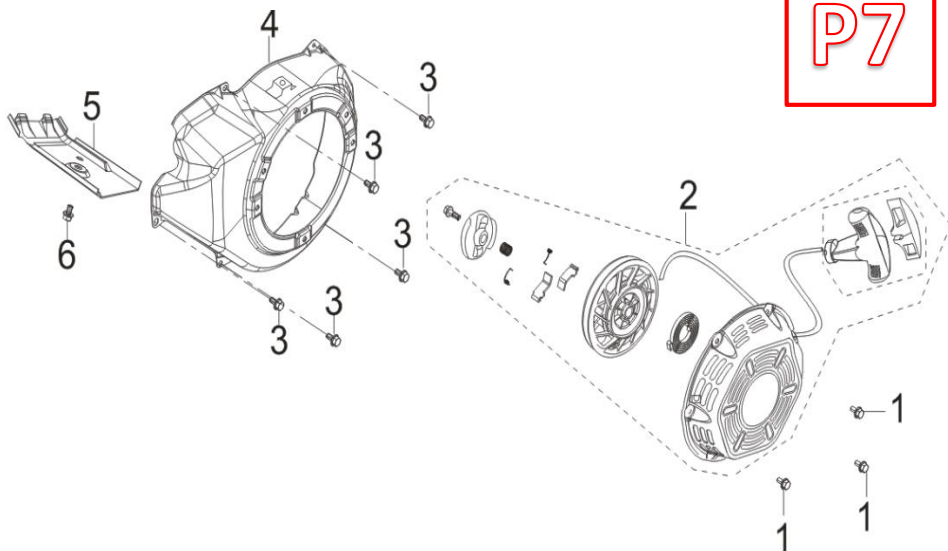

PAG	POS	REFERENCIA	DESCRIPCION
P7	1	D35M100/P7/2	TORNILLO ARRANCADOR MOTOR DUCATI DCW25/40
P7	2	DGW3500ES/P7/2	ARRANCADOR COMPLETO GENERADOR SOLDADOR DUCATI
P7	3	D35M100/P11/4	TORNILLO SUJECCION MOTOR DUCATI DCW25/40
P7	4	DGW3500ES/P7/4	CARCASA AIREACION GENERADOR SOLDADOR DUCATI
P7	5	D35M390/P8/2	CHAPA AIREACION CULATA MOTOR DUCATI 390CC
P7	6	D35M100/P11/4	TORNILLO SUJECCION MOTOR DUCATI DCW25/40


P8

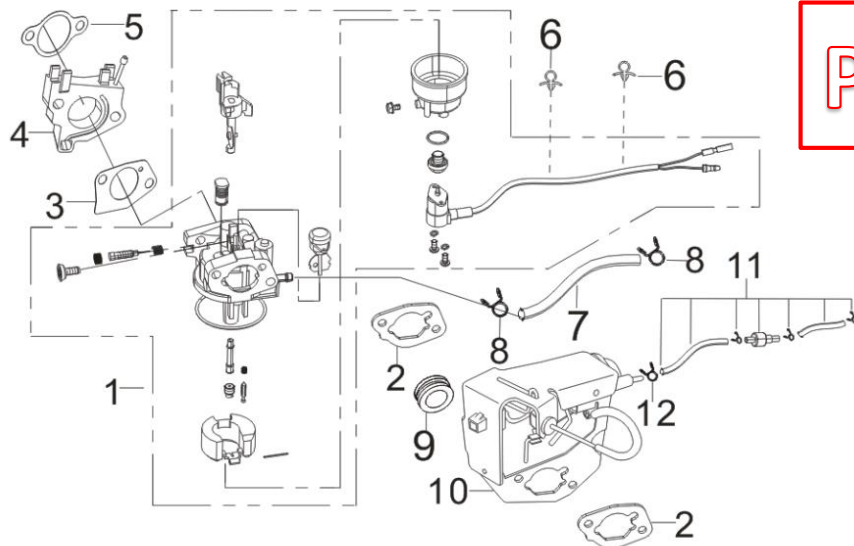

PAG	POS	REFERENCIA	DESCRIPCION
P8	1	DGW3500ES/P8/1	CARBURADOR COMPLETO GENERADOR SOLDADOR DUCATI
P8	2	DGW3500ES/P8/2	JUNTA FILTRO AIRE GENERADOR SOLDADOR DUCATI
P8	3	DGW3500ES/P8/3	JUNTA CARBURADOR GENERADOR SOLDADOR DUCATI
P8	4	DGW3500ES/P8/4	SEPARADOR TERMICO GENERADOR SOLDADOR DUCATI
P8	5	DGW3500ES/P8/5	JUNTA ADMISION GENERADOR SOLDADOR DUCATI
P8	6	DGW3500ES/P8/6	CLIP GENERADOR SOLDADOR DUCATI
P8	7	DGW3500ES/P8/7	TUBO GASOLINA GENERADOR SOLDADOR DUCATI
P8	8	D35M100/P11/8	CLIP TUBO MOTOR DUCATI DCW25/40
P8	9	DGW3500ES/P8/9	PASATUBO RESPIRADERO GENERADOR SOLDADOR DUCATI
P8	10	DGW3500ES/P8/10	STARTER COMPLETO GENERADOR SOLDADOR DUCATI
P8	11	DGW3500ES/P8/11	TUBO VACIO COMPLETO GENERADOR SOLDADOR DUCATI
P8	12	D35M100/P11/8	CLIP TUBO MOTOR DUCATI DCW25/40




GENERADOR SOLDADOR DUCATI 3,5 KW 190 DUAL 120V-60Hz 240V/60Hz REF. DGW3500ES

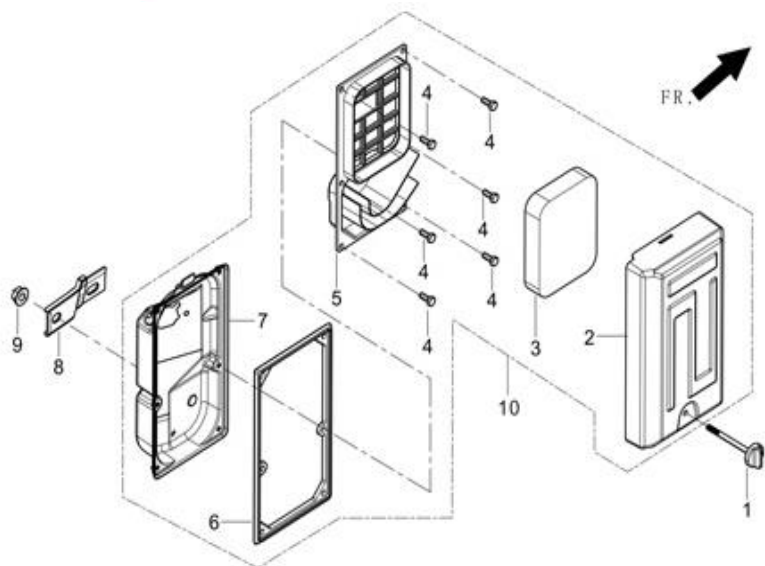

P9

PAG	POS	REFERENCIA	DESCRIPCION
P9	8	DGW3500ES/P9/8	SOPORTE FILTRO AIRE GENERADOR SOLDADOR DUCATI
P9	9	DGW3500ES/P9/9	ARANDELA GENERADOR SOLDADOR DUCATI
P9	10	DGW3500ES/P9/10	ANCLAJE FILTRO AIRE GENERADOR SOLDADOR DUCATI

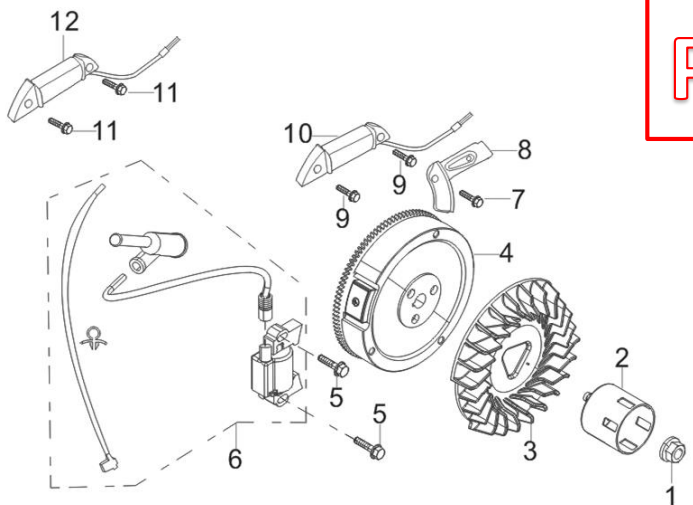


P10

PAG	POS	REFERENCIA	DESCRIPCION
P10	1	D35M390/P13/1	TUERCA MOTOR 390 CC GEN,SOLDADOR DUCATI
P10	2	D35M390/P13/2	POLEA ARRANCADORA MOTOR DUCATI 390CC
P10	3	DGW3500ES/P10/3	VENTILADOR GENERADOR SOLDADOR DUCATI
P10	4	DGW3500ES/P10/4	VOLANTE ARRANQUE GENERADOR SOLDADOR DUCATI
P10	5	D35M390/P13/6	TORNILLO MOTOR 390 CC GEN,SOLDADOR DUCATI
P10	6	DGW3500ES/P10/6	BOBINA ARRANQUE GENERADOR SOLDADOR DUCATI
P10	7	D35M210/P14/11	TORNILLO MOTOR DUCATI 210CC DCW/DHL
P10	8	DGW3500ES/P10/8	PASACABLE GENERADOR SOLDADOR DUCATI
P10	9	D35M390/P13/6	TORNILLO MOTOR 390 CC GEN,SOLDADOR DUCATI
P10	10	DGW3500ES/P10/10	BOBINA DE CARGA GENERADOR SOLDADOR DUCATI
P10	11	DGW3500ES/P10/11	TORNILLO GENERADOR SOLDADOR DUCATI
P10	12	DGW3500ES/P10/12	BOBINA DE CARGA 2 GENERADOR SOLDADOR DUCATI




GENERADOR SOLDADOR DUCATI 3,5 KW 190 DUAL 120V-60Hz 240V/60Hz REF. DGW3500ES

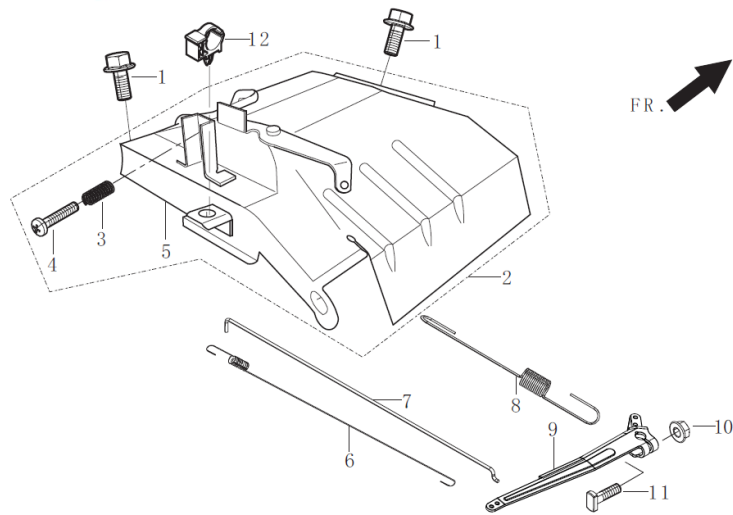

P11

PAG	POS	REFERENCIA	DESCRIPCION
P11	1	D35M100/P11/4	TORNILLO SUJECCION MOTOR DUCATI DCW25/40
P11	2	DGW3500ES/P11/2	ACELERADOR COMPLETO GENERADOR SOLDADOR DUCATI
P11	6	D35M390/P14/2	MUELLE RETORNO GAS MOTOR DUCATI 390CC
P11	7	D35M390/P14/3	VARILLA GAS MOTOR 390 CC GEN,SOLDADOR DUCATI
P11	8	DGW3500ES/P11/8	RESORTE REGULADOR GENERADOR SOLDADOR DUCATI
P11	9	D35M390/P14/5	BRAZO REGULADOR MOTOR DUCATI 390CC
P11	10	D35M100/P10/4	TUERCA SILENCIOSO MOTOR DUCATI DCW25/40
P11	11	D35M100/P13/3	TORNILLO BRAZO REGUALDOR MOTOR DUCATI DCW25/40
P11	12	DGW3500ES/P11/12	SUJETA TUBO GENERADOR SOLDADOR DUCATI

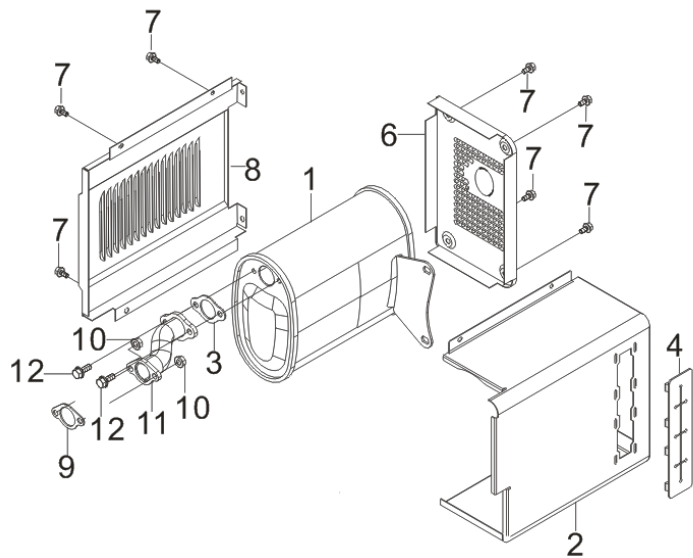


P12

PAG	POS	REFERENCIA	DESCRIPCION
P12	1	DGW3500ES/P12/1	SILENCIOSO GENERADOR SOLDADOR DUCATI
P12	2	DGW3500ES/P12/2	TAPA TRASERA GENERADOR SOLDADOR DUCATI
P12	3	DGW3500ES/P12/3	JUNTA COLECTOR GENERADOR SOLDADOR DUCATI
P12	4	DGW3500ES/P12/4	GOMA TAPA GENERADOR SOLDADOR DUCATI
P12	6	DGW3500ES/P12/6	TAPA DELANTERA GENERADOR SOLDADOR DUCATI
P12	7	DGW3500ES/P12/7	TORNILLO GENERADOR SOLDADOR DUCATI
P12	8	DGW3500ES/P12/8	TAPA LATERAL GENERADOR SOLDADOR DUCATI
P12	9	DGW3500ES/P12/9	JUNTA SILENCIOSO GENERADOR SOLDADOR DUCATI
P12	10	D35M210/P11/2	TUERCA MOTOR DUCATI 210CC DCW/DHL
P12	11	DGW3500ES/P12/11	COLECTOR GENERADOR SOLDADOR DUCATI
P12	12	DGW3500ES/P12/12	TORNILLO GENERADOR SOLDADOR DUCATI




GENERADOR SOLDADOR DUCATI 3,5 KW 190 DUAL 120V-60Hz 240V/60Hz REF. DGW3500ES

P13

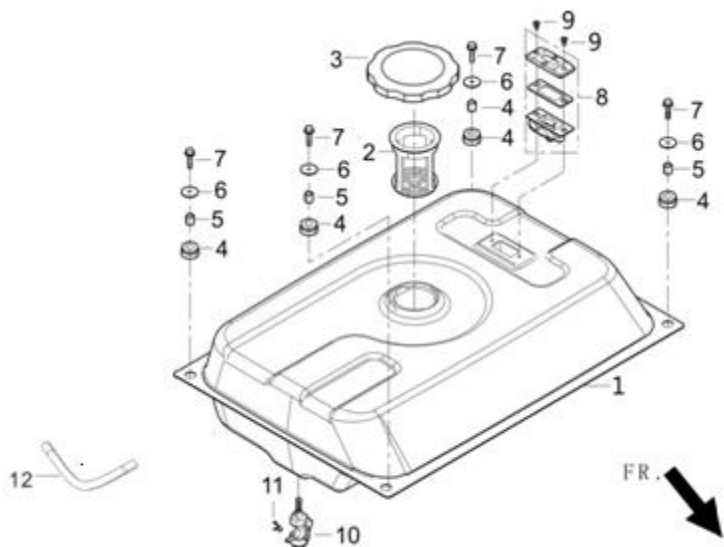

PAG	POS	REFERENCIA	DESCRIPCION
P13	1	DGW3500ES/P13/1	DEPOSITO COMBUSTIBLE GENERADOR SOLDADOR DUCATI
P13	2	DGW3500ES/P13/2	FILTRO LLENADO GENERADOR SOLDADOR DUCATI
P13	3	DGW3500ES/P13/3	TAPON DEPOSITO GENERADOR SOLDADOR DUCATI
P13	4	DGW3500ES/P13/4	GOMA DEPOSITO GENERADOR SOLDADOR DUCATI
P13	5	DGW3500ES/P13/5	CASQUILLO GENERADOR SOLDADOR DUCATI
P13	6	DGW3500ES/P13/6	ARANDELA GENERADOR SOLDADOR DUCATI
P13	7	DGW3500ES/P13/7	TORNILLO GENERADOR SOLDADOR DUCATI
P13	8	DGW3500ES/P13/8	AFORADOR GENERADOR SOLDADOR DUCATI
P13	9	DGW3500ES/P13/9	TORNILLO GENERADOR SOLDADOR DUCATI
P13	10	DGW3500ES/P13/10	GRIFO COMBUSTIBLE GENERADOR SOLDADOR DUCATI
P13	11	D35M100/P11/8	CLIP TUBO MOTOR DUCATI DCW25/40
P13	12	DGW3500ES/P13/12	TUBO COMBUSTIBLE GENERADOR SOLDADOR DUCATI

P14

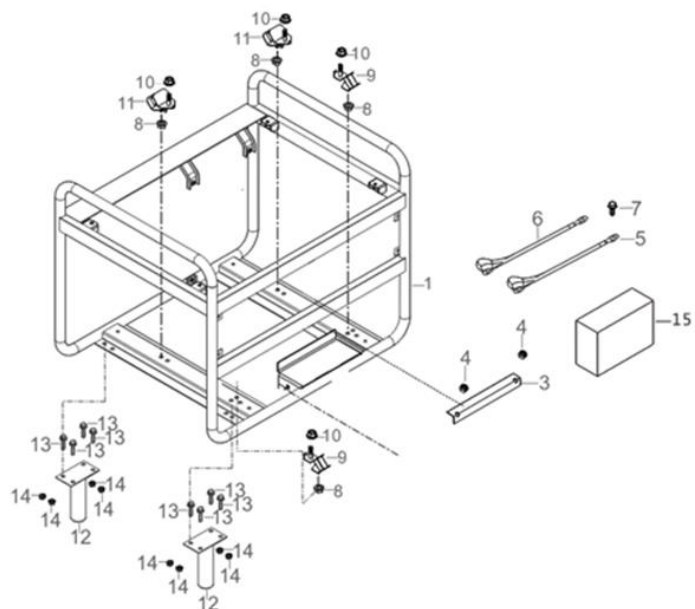


PAG	POS	REFERENCIA	DESCRIPCION
P14	1	DGW3500ES/P14/1	CHASIS GENERADOR SOLDADOR DUCATI
P14	3	DGW3500ES/P14/3	BRIDA BATERIA GENERADOR SOLDADOR DUCATI
P14	4	D35M100/P10/4	TUERCA SILENCIOSO MOTOR DUCATI DCW25/40
P14	5	DGW3500ES/P14/5	CABLE + GENERADOR SOLDADOR DUCATI
P14	6	DGW3500ES/P14/6	CABLE - GENERADOR SOLDADOR DUCATI
P14	7	DGR361250I/P11/28	TORNILLO DGR1250I/2000I/3000I
P14	8	D35M390/P11/7	TUERCA MOTOR 390 CC GEN,SOLDADOR DUCATI
P14	9	DGW3500ES/P14/9	SILENTBLOCK GENERADOR SOLDADOR DUCATI
P14	10	DGR361250I/P13/9	TUERCA DGR1250I
P14	11	DGW3500ES/P14/11	SILENTBLOCK TRASERO GENERADOR SOLDADOR DUCATI
P14	12	DGW3500ES/P14/12	PATA GENERADOR SOLDADOR DUCATI
P14	13	DGW3500ES/P14/13	TORNILLO GENERADOR SOLDADOR DUCATI
P14	14	DGW3500ES/P14/14	TUERCA GENERADOR SOLDADOR DUCATI
P14	15	DGW3500ES/P14/15	BATERIA GENERADOR SOLDADOR DUCATI




GENERADOR SOLDADOR DUCATI 3,5 KW 190 DUAL 120V-60Hz 240V/60Hz REF. DGW3500ES

P15

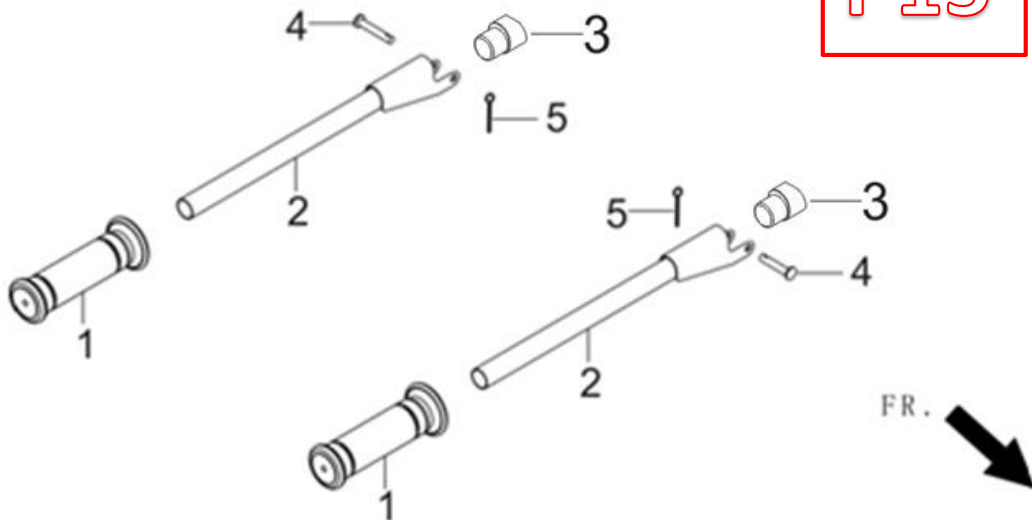

PAG	POS	REFERENCIA	DESCRIPCION
P15	1	DGW3500ES/P15/1	EMPUÑADURA GENERADOR SOLDADOR DUCATI
P15	2	DGW3500ES/P15/2	ASA GENERADOR SOLDADOR DUCATI
P15	3	DGW3500ES/P15/3	TACO ASA GENERADOR SOLDADOR DUCATI
P15	4	DGW3500ES/P15/4	PASADOR GENERADOR SOLDADOR DUCATI
P15	5	DGW3500ES/P15/5	PASADOR GENERADOR SOLDADOR DUCATI

P16

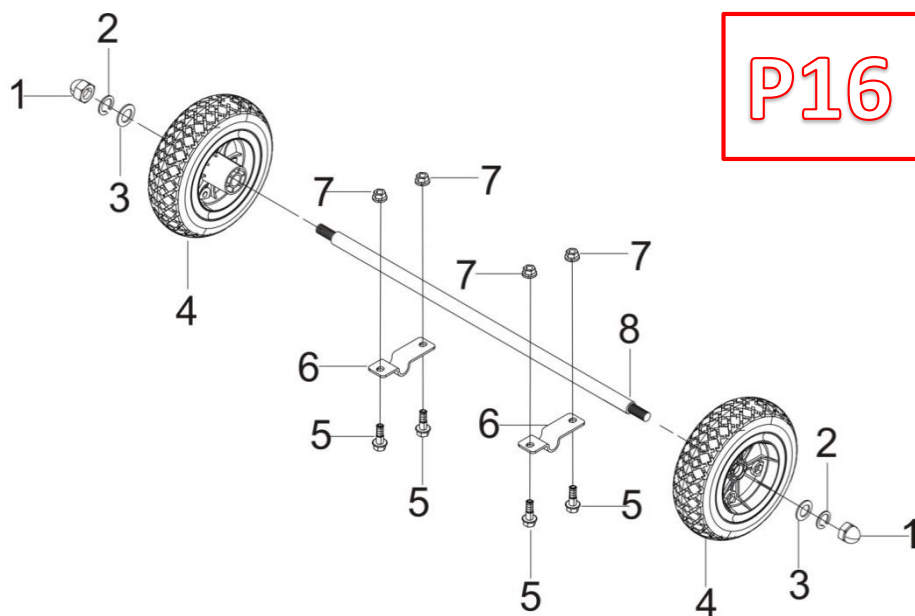


PAG	POS	REFERENCIA	DESCRIPCION
P16	1	DGW3500ES/P16/1	TUERCA GENERADOR SOLDADOR DUCATI
P16	2	DGW3500ES/P16/2	ARANDELA GENERADOR SOLDADOR DUCATI
P16	3	DGW3500ES/P16/3	ARANDELA GENERADOR SOLDADOR DUCATI
P16	4	DGW3500ES/P16/4	RUEDA GENERADOR SOLDADOR DUCATI
P16	5	DGW3500ES/P16/5	TORNILLO GENERADOR SOLDADOR DUCATI
P16	6	DGW3500ES/P16/6	BRIDA EJE GENERADOR SOLDADOR DUCATI
P16	7	DGW3500ES/P16/7	TUERCA GENERADOR SOLDADOR DUCATI
P16	8	DGW3500ES/P16/8	EJE RUEDA GENERADOR SOLDADOR DUCATI



GENERADOR SOLDADOR DUCATI 3,5 KW 190 DUAL 120V-60Hz 240V/60Hz REF. DGW3500ES

P17

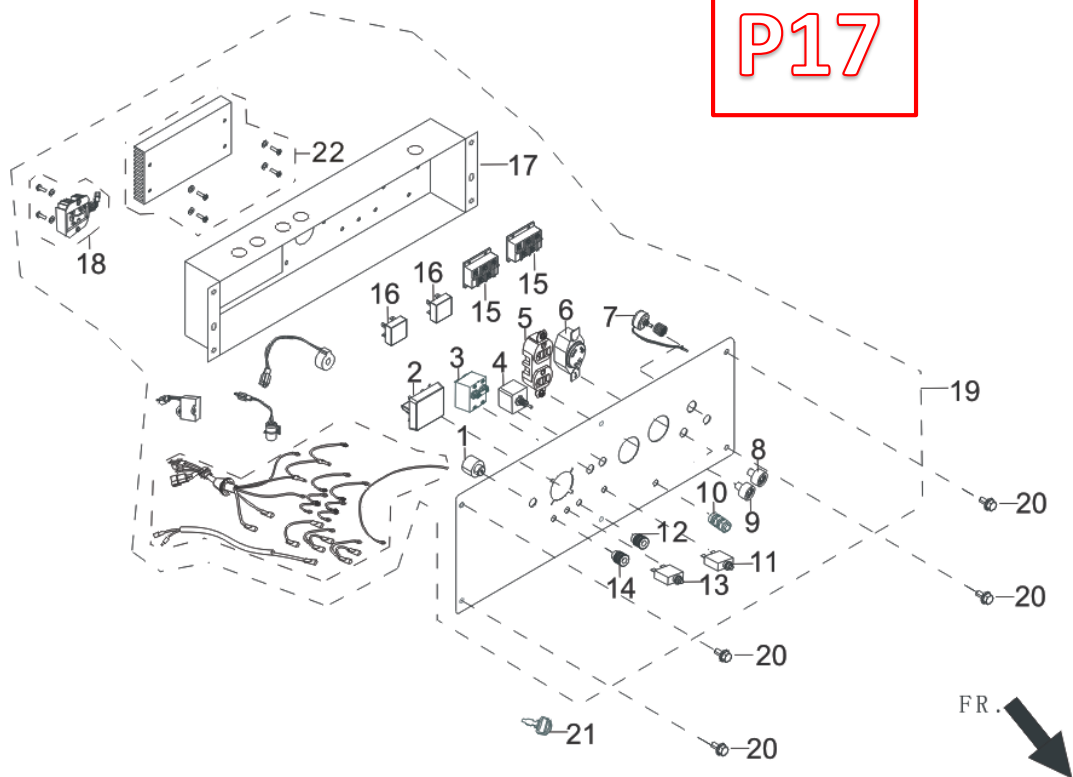


PAG	POS	REFERENCIA	DESCRIPCION
P17	1	DGW3500ES/P17/1	BOMBIN ARRANQUE GENERADOR SOLDADOR DUCATI
P17	2	DGW3500ES/P17/2	VOLTIMETRO GENERADOR SOLDADOR DUCATI
P17	3	DGW3500ES/P17/3	INTERRUPTOR AC GENERADOR SOLDADOR DUCATI
P17	4	DGW3500ES/P17/4	INTERRUPTOR GENERADOR SOLDADOR DUCATI
P17	5	DGR362000IS/P6/5	ENCHUFE DOBLE NEMA A DGR2000IS
P17	6	DGW3500ES/P17/6	ENCHUFE 3 POLOS GENERADOR SOLDADOR DUCATI
P17	7	DGW3500ES/P17/7	REGULADOR CORRIENTE GENERADOR SOLDADOR DUCATI
P17	8	DGW3500ES/P17/8	CONECTOR GENERADOR SOLDADOR DUCATI
P17	9	DGW3500ES/P17/9	CONECTOR GENERADOR SOLDADOR DUCATI
P17	10	DGW3500ES/P17/10	TERMINAL MASA GENERADOR SOLDADOR DUCATI
P17	11	DGW3500ES/P17/11	PROTECTOR TERMICO GENERADOR SOLDADOR DUCATI
P17	12	DGW3500ES/P17/12	TERMINAL NEGATIVO GENERADOR SOLDADOR DUCATI
P17	13	DGR362000I/P6/7	INTERRUPTOR AC 20 AMP DGR2000I/3000I
P17	14	DGW3500ES/P17/14	TERMINAL POSITIVO GENERADOR SOLDADOR DUCATI
P17	17	DGW3500ES/P17/17	TAPA TRASERA GENERADOR SOLDADOR DUCATI
P17	22	DGW3500ES/P17/22	REGULADOR VOLTAJE GENERADOR SOLDADOR DUCATI
P17	19	DGW3500ES/P17/19	PANEL COMPLETO GENERADOR SOLDADOR DUCATI
P17	20	DGW3500ES/P17/20	TORNILLO GENERADOR SOLDADOR DUCATI
P17	21	DGW3500ES/P17/21	LLAVE GENERADOR SOLDADOR DUCATI
P17	18	DGW3500ES/P17/18	REGULADOR CARGA GENERADOR SOLDADOR DUCATI




GENERADOR SOLDADOR DUCATI 3,5 KW 190 DUAL 120V-60Hz 240V/60Hz REF. DGW3500ES

P18

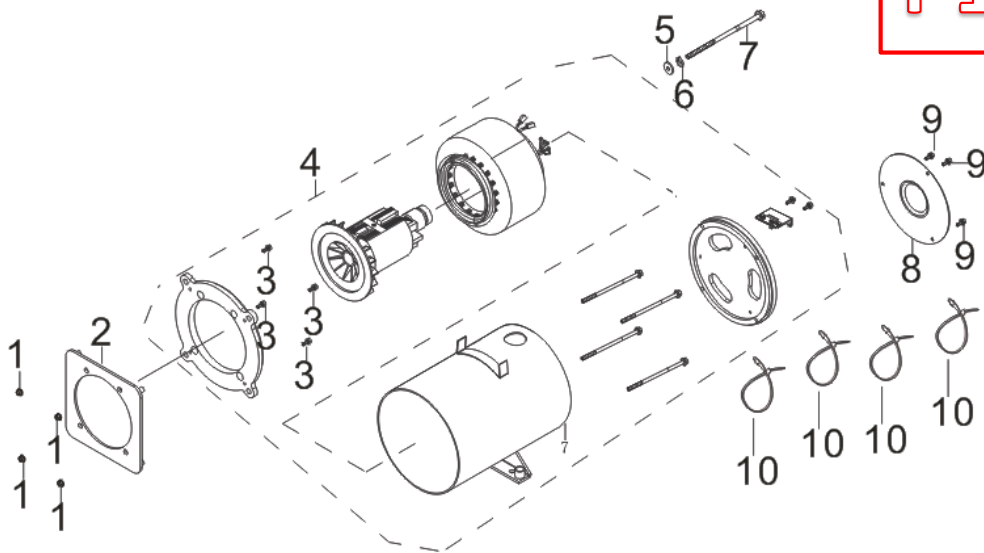

PAG	POS	REFERENCIA	DESCRIPCION
P18	1	DCH3550/P16/5	TUERCA DCH50
P18	2	DGW3500ES/P18/2	SOPORTE ALTERNADOR GENERADOR SOLDADOR DUCATI
P18	3	DGW3500ES/P18/3	TORNILLO GENERADOR SOLDADOR DUCATI
P18	4	DGW3500ES/P18/4	ALTERNADOR COMPLETO GENERADOR SOLDADOR DUCATI
P18	5	DGW3500ES/P18/5	ARANDELA GENERADOR SOLDADOR DUCATI
P18	6	DGW3500ES/P18/6	ARANDELA GENERADOR SOLDADOR DUCATI
P18	7	DGW3500ES/P18/7	TORNILLO ROTOR GENERADOR SOLDADOR DUCATI
P18	8	DGW3500ES/P18/8	TAPA ALTERNADOR GENERADOR SOLDADOR DUCATI
P18	9	DGW3500ES/P18/9	TORNILLO GENERADOR SOLDADOR DUCATI
P18	10	DGR362000I/P6/32	BRIDA DGR2000I

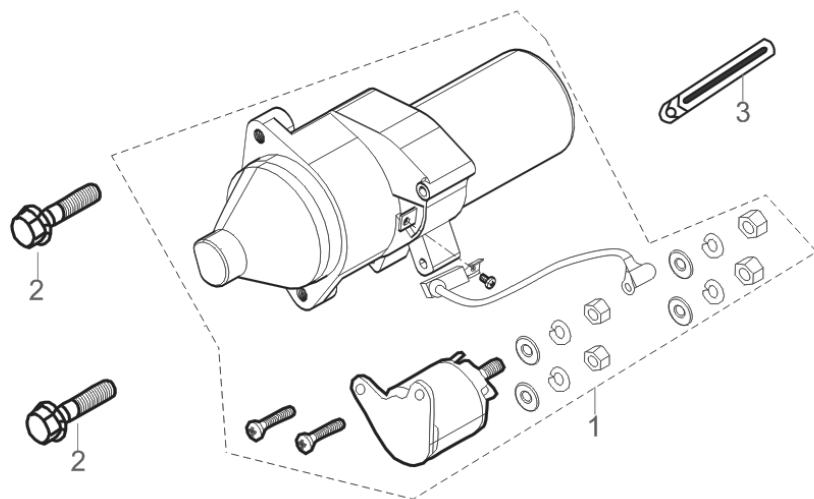

P19

PAG	POS	REFERENCIA	DESCRIPCION
P19	1	DGW3500ES/P19/1	MOTOR ARRANQUE GENERADOR SOLDADOR DUCATI
P19	2	DCH3550/P16/4	TORNILLO DCH50
P19	3	D35M390/P2/9	SUJETA CABLES MOTOR 390 CC GEN,SOLDADOR DUCATI